
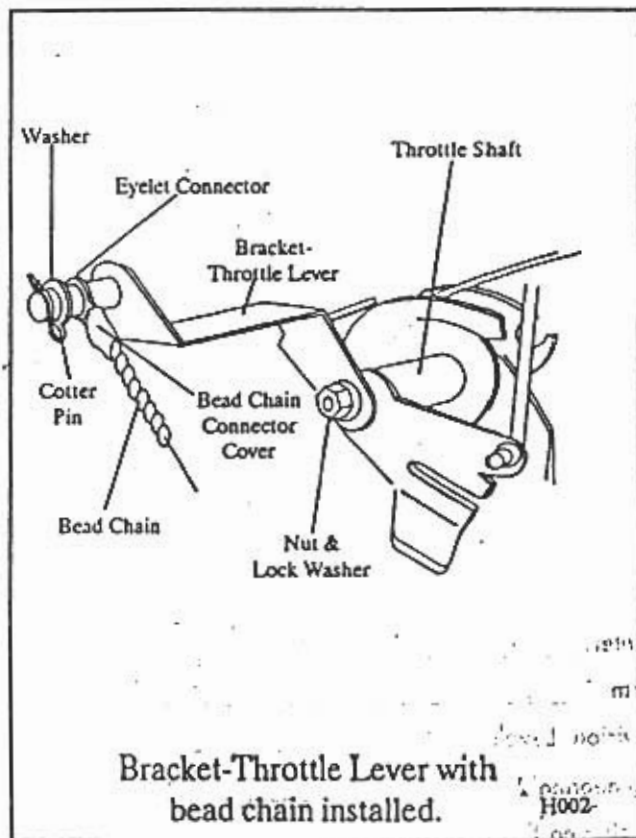


1988 - 1990 HONDA CIVIC (with 1.5 L engine)  
Throttle Lever Adaptor Package (Model Z)  
250-4197

### Throttle Connection


The Cruise Control Cable attaches to the Bracket-Throttle Lever provided in the adaptor package.

- STEP 1** Remove nut and lock washer from passenger's side of Throttle Shaft. Install Bracket-Throttle Lever. Reinstall lock washer and nut, retighten to 7-10 ft. lbs.  
**NOTE:** Be careful not to cross thread the nut when retightening.
- STEP 2** Fabricate Bracket-Cable from one of the brackets provided in the basic kit using the template on the reverse side of this sheet.
- STEP 3** Install Bracket-Cable to cam cover and attach Cruise Control Cable with "Tube" clamps, as shown in Figure H001.
- STEP 4** Attach Bead Chain, Eyelet Connector, and Bead Chain Connector Cover, to the Bracket-Throttle Lever, and install washer and cotter pin as shown in Figure H002.

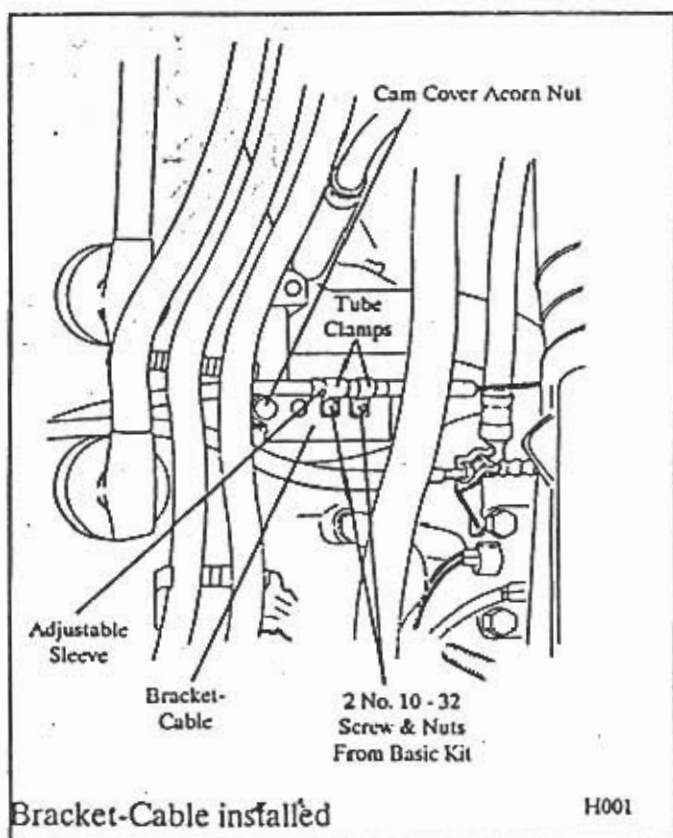

Form 2274 Rev. A  
2/95

# Bracket- Cable

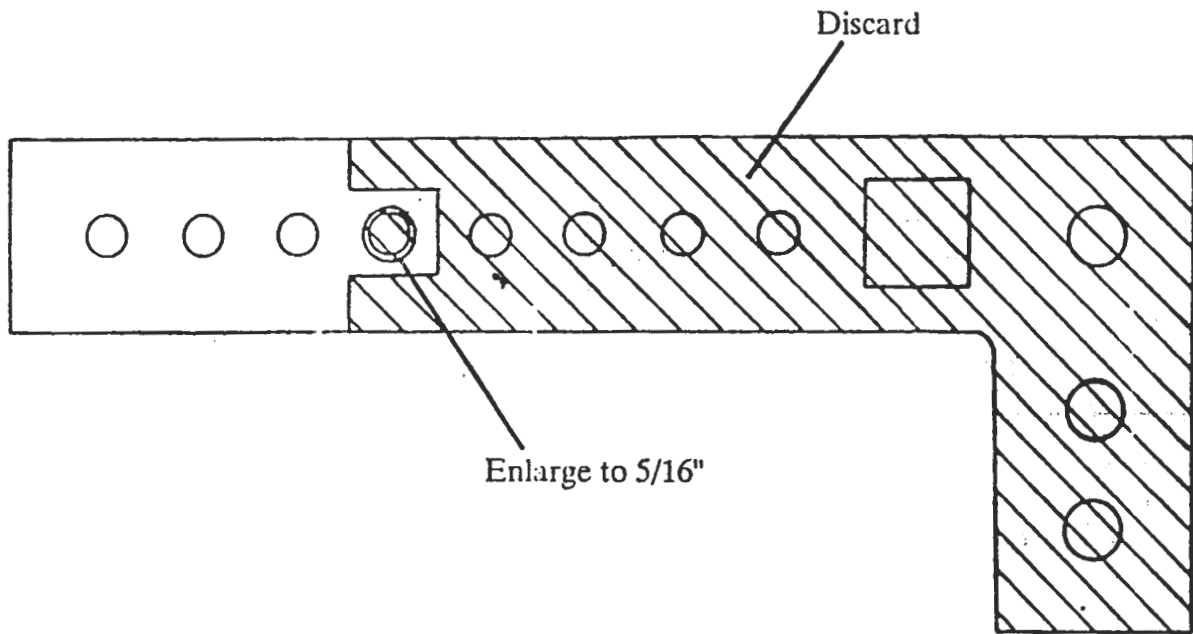

Bracket provided in Basic Cruise Control Kit